


Nero

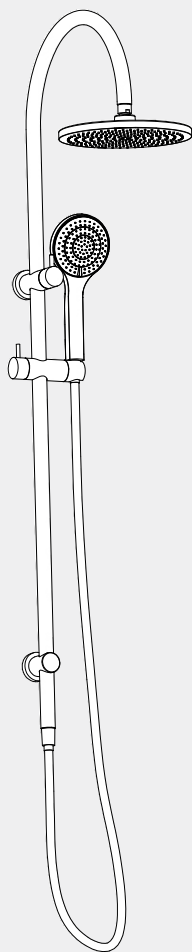

WATER RATING
www.waterrating.gov.au


9.0 litres per minute
(overhead shower)

In accordance with AS/NZS 4409

Licence No. 1225
YINHOUPKANG SANITARY
WALL & PIPING COMPANY

Hand shower
3 star
9 litres per minute

Specifications

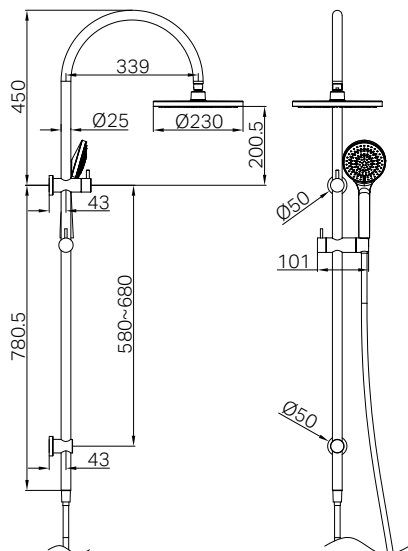

WM-060093

Temperature Rating

Min 1°C-Max 75°C

Pressure Rating

Min 150kpa - Max 500kpa

Packaging Includes

- 1x Hand Shower (Built - In Check Valve)
- 1x Shower Head
- 1x Shower Arm
- 1x Shower Rail
- 1x 1.5m PVC Hose
- 2x Back Plates
- 1x Slider Bracket

Finish & SKU



Chrome
NR221905bCH

Matte White
NR221905bMW



Brushed Nickel
NR221905bBN



Matte Black
NR221905bMB



Brushed Gold
NR221905bBG




*Dimensions are nominal measurements only.

**Dual-check valve pre-installed.

Installation Instruction

GENERAL INSTRUCTIONS:




- This product must be installed by a licensed plumber. Ensure that your plumbing installation conforms to the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the shower. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the shower components.
- Ensure that all outlets used for personal hygiene deliver water at a safe temperature in accordance with regional regulations.
- Verify that the water pressure is within the recommended range for the shower to function properly.

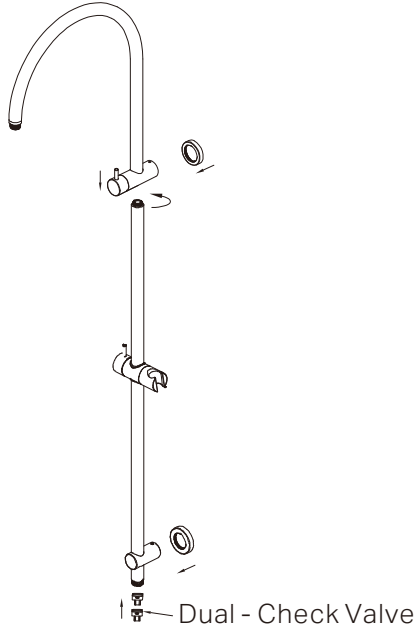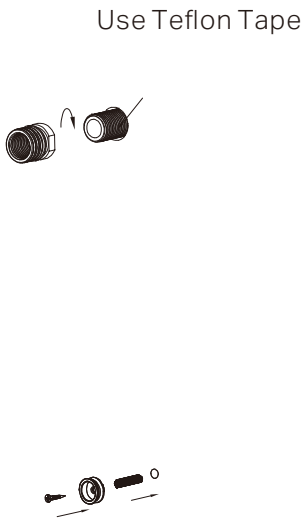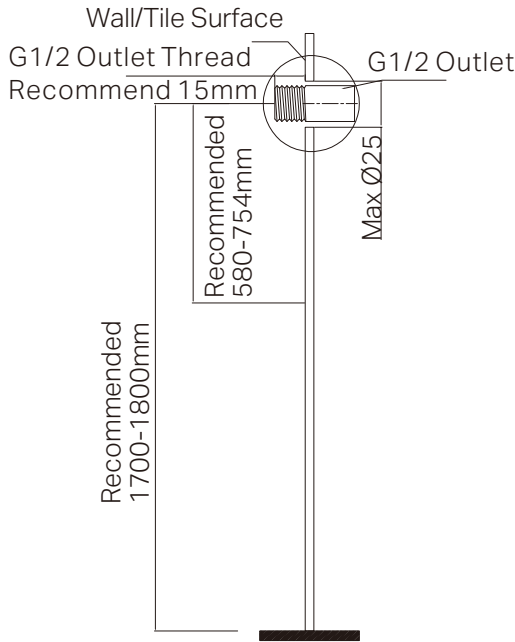

1. Ensure the G1/2 outlet thread extends 15mm beyond the finished wall or tile surface, trim the thread if necessary to achieve this length. The recommended height for the water inlet is 1700-1800mm from the finished floor surface. Drill a 6mm hole in the wall, 580-754mm below the center point of the inlet point, as shown in above figure.

2. Apply the G1/2 water outlet connection with Teflon tape to ensure a watertight seal. Screw the adapter onto the outlet. Insert expansion plug into the 6mm hole, and attach the fixing bracket. Position the fixing bracket against the wall and secure it firmly using self-tapping screws. Ensure the fixing bracket is level and stable for optimal support.

3. Insert shower arm into shower rail, and secure by grub screw. Slide the two backplates onto shower arm and lower mounting pillar. Note: Dual-check valve are pre-installed in the shower rail.

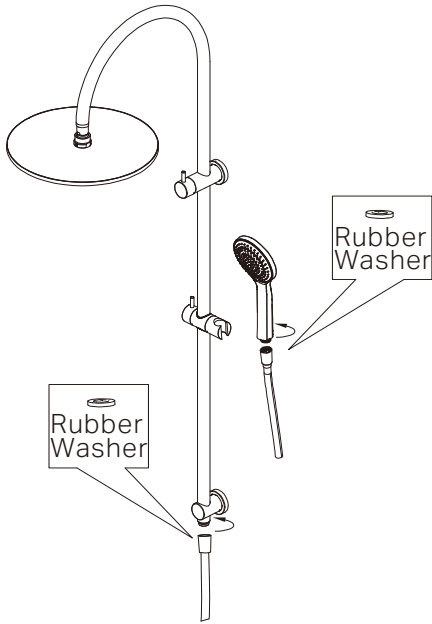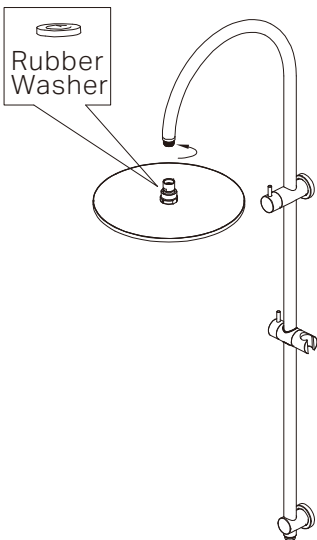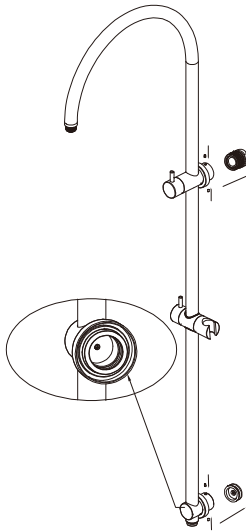

4. Position the shower rail assembly over the wall adaptors. Tighten grub screws firmly with allen key provided. Slide the two backplates against the wall/tile surface properly.

5. Screw the overhead shower into the shower arm, ensuring a rubber washer is in place for watertight seal.

6. Attach the hand shower to the hose and connect the hose to the shower rail, ensuring that rubber washers are in place at both connection points to prevent leaks. Confirm that all connections are securely tightened, then activate the drainage system and turn on the water supply. Inspect all connections for any signs of leakage.

MAINTENANCE AND CARE:

- Regularly check the shower system and all connections for signs of wear or leaks.
- Clean all shower components with mild soapy water to maintain their appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.
- Descale the showerhead, hand shower, and other components periodically to prevent mineral buildup, which can affect water flow and performance.
- Inspect and replace any worn-out parts, such as seals or washers, to ensure the longevity and efficiency of the shower system.
- Ensure all moving parts, such as adjustable brackets or sliding rails, are functioning smoothly and are properly lubricated if necessary.

FINAL INSPECTION:

- Ensure the shower operates smoothly and that there are no leaks at the connections.
- Verify that the water temperature and flow are consistent and as desired.
- Clean the area and the newly installed shower with a soft cloth to remove any installation residues.

Nero

