


Mecca Freestanding
Bath Mixer

Nero

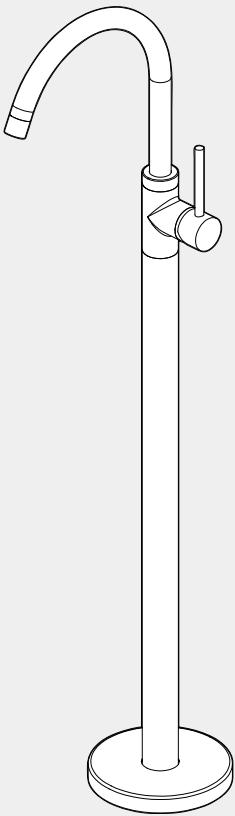

Version:202608

Drawing	Specifications	Packaging Includes												
	SKU NR210903a01 Watermark License WM-060073 Temperature Rating Min 1°C-Max 75°C Pressure Rating Min 150kpa - Max 500kpa	1x Mixer Tap 1x Extension Tube 1x Floor Cover Plate 2x Water Pipes 1x Mixer Box 1x Gloves 4x Dynabolt 1x Instruction 1x Allen Key Pack 1x Leveling Plate 1x Gradiometer 1x Testing Plugs												
	Finish <table><tr><td> Chrome NR210903a01CH</td><td> Gun Metal NR210903a01GM</td><td> Brushed Bronze NR210903a01BZ</td><td> Graphite NR210903a01GR</td></tr><tr><td> Matte Black NR210903a01MB</td><td> Brushed Gold NR210903a01BG</td><td> Matte White NR210903a01MW</td><td> Brushed Nickel NR210903a01BN</td></tr><tr><td> Rome Bronze NR210903a01RB</td><td> Tumbled Antique Brass NR210903a01TA</td><td></td><td></td></tr></table>	Chrome NR210903a01CH	Gun Metal NR210903a01GM	Brushed Bronze NR210903a01BZ	Graphite NR210903a01GR	Matte Black NR210903a01MB	Brushed Gold NR210903a01BG	Matte White NR210903a01MW	Brushed Nickel NR210903a01BN	Rome Bronze NR210903a01RB	Tumbled Antique Brass NR210903a01TA			
Chrome NR210903a01CH	Gun Metal NR210903a01GM	Brushed Bronze NR210903a01BZ	Graphite NR210903a01GR											
Matte Black NR210903a01MB	Brushed Gold NR210903a01BG	Matte White NR210903a01MW	Brushed Nickel NR210903a01BN											
Rome Bronze NR210903a01RB	Tumbled Antique Brass NR210903a01TA													
	*Dimensions are nominal measurements only.													

Installation Instruction



Please check all spare parts against the list when you open the package.

If any problems, please contact with us.


Spare parts list is as follow.

Spare Part List


- 1.Mixer Tap x1
- 2.Extension Tube x1
- 3.Floor Cover Plate x1
- 4.Water Pipes x2
- 5 leveling Plate Screw x4
- 6.leveling Plate x1
- 7.Gradiometer x1
- 8.Flange Screw x4
- 9.Testing Plug x2
- 10.Recessed Box x1
- 11.Sleeve Anchor Kit x4
- 12.Gloves x1
- 13.Installation Manual x1
- 14.Allen Key Set x1

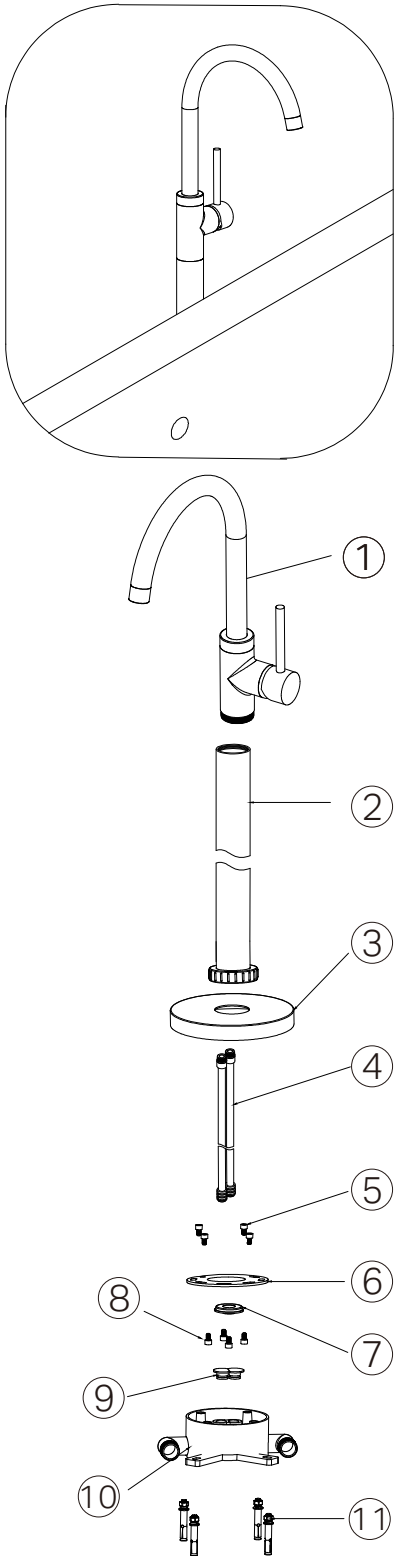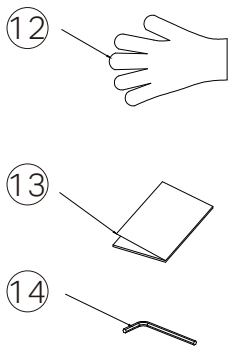


Notes: The floor thickness for tap installation shall be a minimum of 110 mm. Place your freestanding bath in its final position to verify the exact distance between the tub edge and the filler. Ensure the spout will overhang the inside of the tub comfortably.

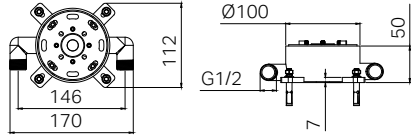


1. Run hot and cold water supply lines underneath the subfloor to the desired location. If your filler utilizes an in-floor mounting body, mount this to structural timber or concrete below the finished floor line.

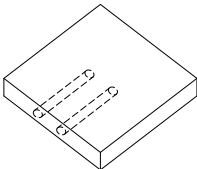


2. Form a 200×200mm rough-in recess on the floor. Depth from ceramic surface to rough-in recess bottom: 50-60mm.

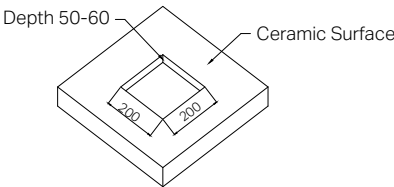


3. Drill four expansion bolt holes on the floor and insert , adjust the horizontal by gradiometer. Install washer, spring washer and nut (in the Sleeve Anchor Kit) in sequence to lock and fix. Sleeve Anchor Kit connect cold & hot water pipes as marked, do water pressure leak test.

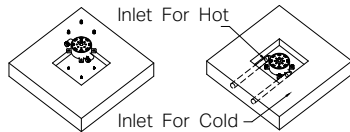


4. Take care to protect the recessed box during floor screeding and laying.

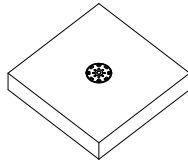


5. Undo 4 grub screws on the leveling plate and remove the gradiometer and testing plug.

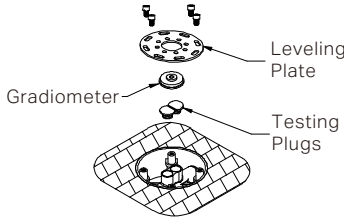


6. Slide the floor cover plate onto the extension tube.

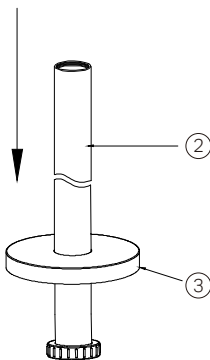



7. Screw hot and cold water pipes into the mixer tap with the allen key, align matching marks, then screw in extension tube.

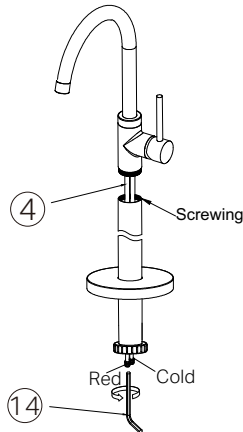

8. Fasten the extension tube to the mounting bracket via the flange screws.

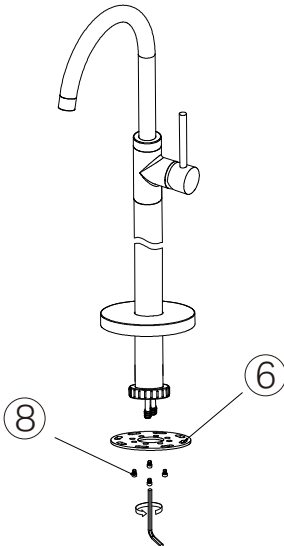

9. Insert the water pipes into the matching holes of the recessed box, then adjust the position of the water spout relative to the bathtub. Fasten the mounting bracket to the recessed box body using the mounting bracket screws.

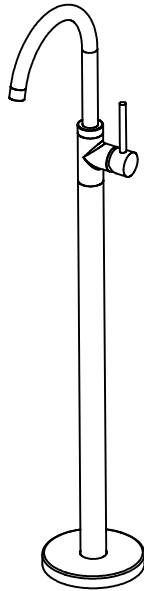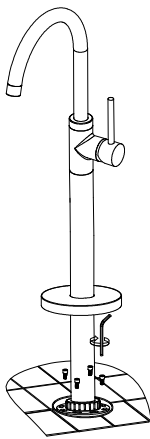

Nero

