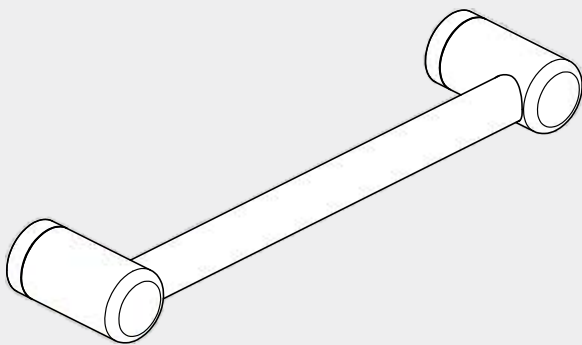


Mecca Care

32mm Grab Rail

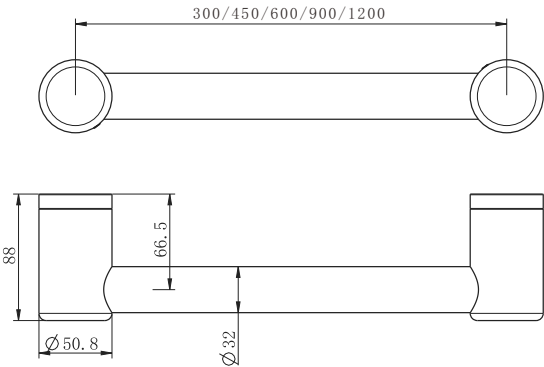
300/450/600/900/1200mm

Nero



Versions:202506

Drawing



Specifications

SKU
300m Length:NRCR3212
450m Length:NRCR3218
600m Length:NRCR3224
900m Length:NRCR3230
1200m Length:NRCR3248

Warning:

These rails are designed to be mounted onto wall studs or masonry walls. Installation is recommended to be completed by qualified trades person who complies with the AS 1428.1-2009 design for access and mobility standard. It is recommended rail location is determined by a qualified occupational therapist or trained professional to the AS 1428.1-2009 standard. Correct installation is required to ensure safe, long term operation. Incorrect mounting can result in reduced capacity of the rail which can result in injury to user and damage to the wall.

Finish

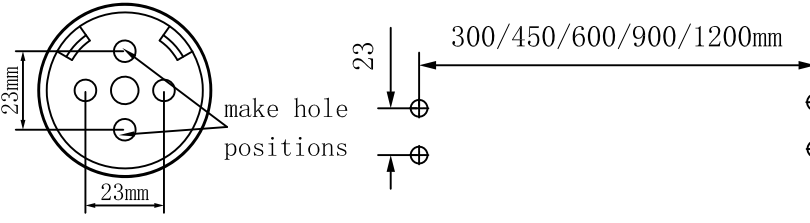
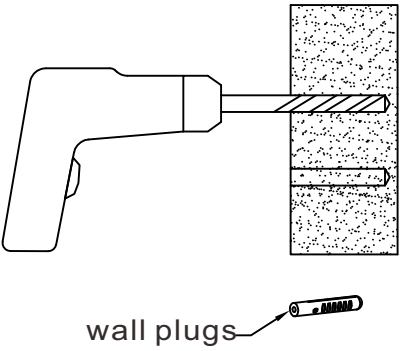
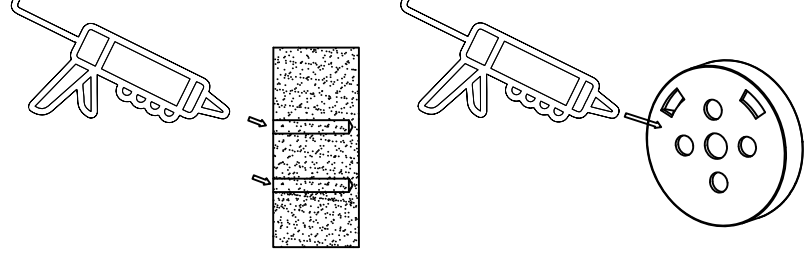
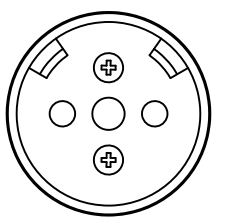
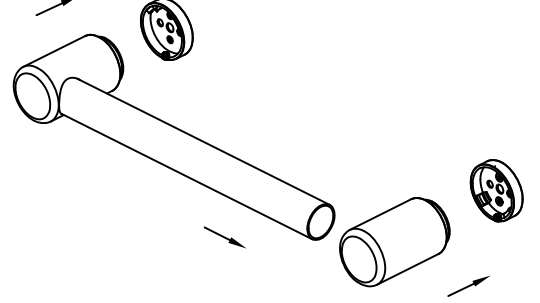
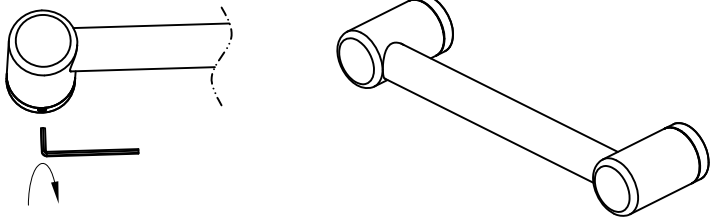
 Chrome NRCR3212CH/NRCR3218CH NRCR3224CH/NRCR3230CH NRCR3248CH	 Gun Metal NRCR3212GM/NRCR3218GM NRCR3224GM/NRCR3230GM NRCR3248GM	 Brushed Bronze NRCR3212BZ/NRCR3218BZ NRCR3224BZ/NRCR3230BZ NRCR3248BZ
 Matte Black NRCR3212MB/NRCR3218MB NRCR3224MB/NRCR3230MB NRCR3248MB	 Brushed Gold NRCR3212BG/NRCR3218BG NRCR3224BG/NRCR3230BG NRCR3248BG	 Brushed Nickel NRCR3212BN/NRCR3218BN NRCR3224BN/NRCR3230BN NRCR3248BN

Features

1. Australian owned and designed.
2. Sizes: 300 - 1200mm lengths as standard.
3. Modular design, the rail to be mounted horizontally, vertically or at any angle and cut down to suit your bathroom.
4. 150kg capacity for all 25mm and 32mm diameter grab rails.
5. 32mm diameter rails are approved for standard AS1428.1 requirements in DDA bathrooms.
6. Gun metal, brushed gold and brushed bronze colours are PVD coated for long term durability.

*Dimensions are nominal measurements only.

Installation Instruction

	1. Locate wall studs, install into at least one stud. Place wall seal/mounting bracket on wall at correct height over centre of stud and mark hole positions on wall (minimum 2 supplied screws per bracket).
 wall plugs	2. Drill pilot holes into wall stud approximately 60mm deep to suit mounting screws (and wall plugs if required). Tip: 3mm hole for screws into timber or 8mm hole for wall plugs.
	3. Apply small amount of silicon to mounting bracket and wall in and around the screw holes.
	4. Install mounting brackets by screwing onto wall. Tip: Use appropriate mounting screws for the wall stud material, supplied screws are for timber wall studs.
	5. Slide rail tube into end bracket and push onto wall brackets. Tip: Rail length can be cut down to a smaller size, simply use an angle grinder, hacksaw or pipe cutter then deburr the end with a file or grinder and reinsert into the end bracket.
	6. Tighten grub screws with allen key. Tip: If rail rattles, loosen end bracket, twist slightly and tighten.

Nero



MECCA CARE
DDA CARE 32MM

