

Nero



Drawing



Finish & SKU

 Brushed Gold
NR251905aBG


Packaging Includes

*Dimensions are nominal measurements only.

Important

All products must be installed by licensed plumbers.


All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

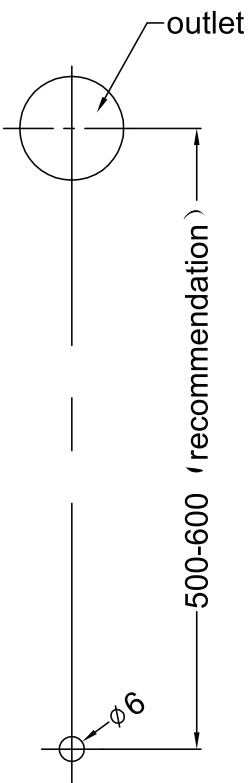


1. Drill a ø6mm hole at the downwards outlet vertical downward position in the recommended range.




2. Screw the adapter onto the outlet. Push wall plug into drilled hole. Fit lower mounting pillar in place with screw. Tighten firmly.

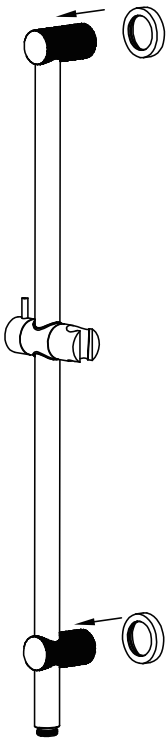

3. Slide both top and bottom back plate onto the rail assembly, as shown on the picture.

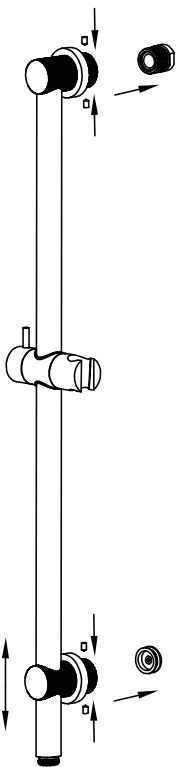

4. Push shower rail assembly onto the wall/tile face. Tighten grub screws firmly. Slide the back plates against the wall/tile face properly.

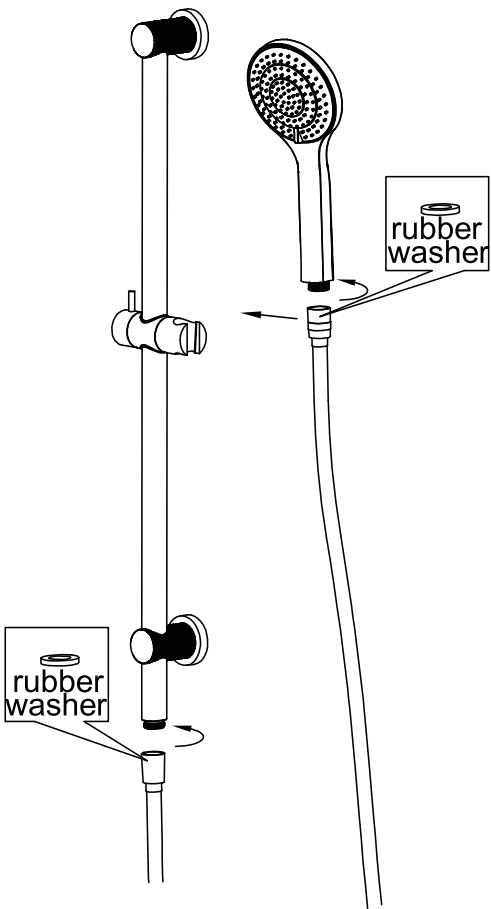

5. Connect shower rail and hand shower with hose. TEST & CHECK FOR LEAKS.

Nero

