

New Mecca

Bathroom Accessories

Versions:202506

Finish



Chrome



Gun Metal



Brushed Nickel



Matte Black




Brushed Gold




Brushed Bronze

New Mecca Bathroom Accessories


ROBE HOOK
NR2382CH / NR2382MB / NR2382BN
NR2382GM / NR2382BG / NR2382BZ

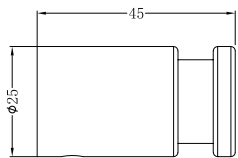


SINGLE TOWEL RAIL 800MM
NR2330CH / NR2330MB / NR2330BN
NR2330GM / NR2330BG / NR2330BZ

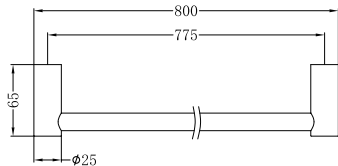


DOUBLE TOWEL RAIL 800MM
NR2330dCH / NR2330dMB / NR2330dBN
NR2330dGM / NR2330dBG / NR2330dBZ




SOAP DISH HOLDER
NR2381CH / NR2381MB / NR2381BN
NR2381GM / NR2381BG / NR2381BZ

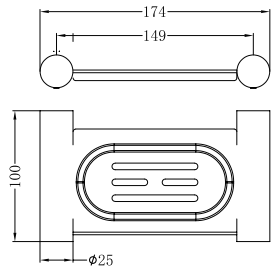


HAND TOWEL RAIL
NR2380CH / NR2380MB / NR2380BN
NR2380GM / NR2380BG / NR2380BZ

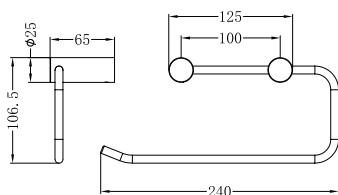


SINGLE TOWEL RAIL 600MM
NR2324CH / NR2324MB / NR2324BN
NR2324GM / NR2324BG / NR2324BZ

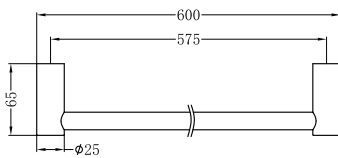


DOUBLE TOWEL RAIL 600MM
NR2324dCH / NR2324dMB / NR2324dBN
NR2324dGM / NR2324dBG / NR2324dBZ

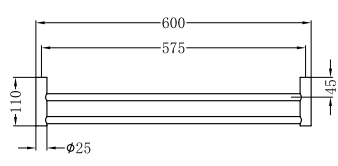


METAL SHOWER SHELF
NR2387aCH / NR2387aMB / NR2387aBN
NR2387aGM / NR2387aBG / NR2387aBZ

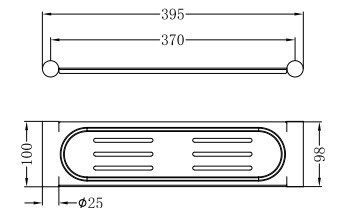


TOILET ROLL HOLDER
NR2386CH / NR2386MB / NR2386BN
NR2386GM / NR2386BG / NR2386BZ

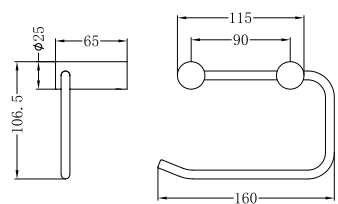

TOWEL RING
NR2380aCH / NR2380aMB / NR2380aBN
NR2380aGM / NR2380aBG / NR2380aBZ

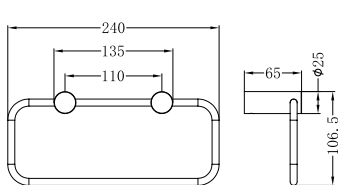

Installation Instruction

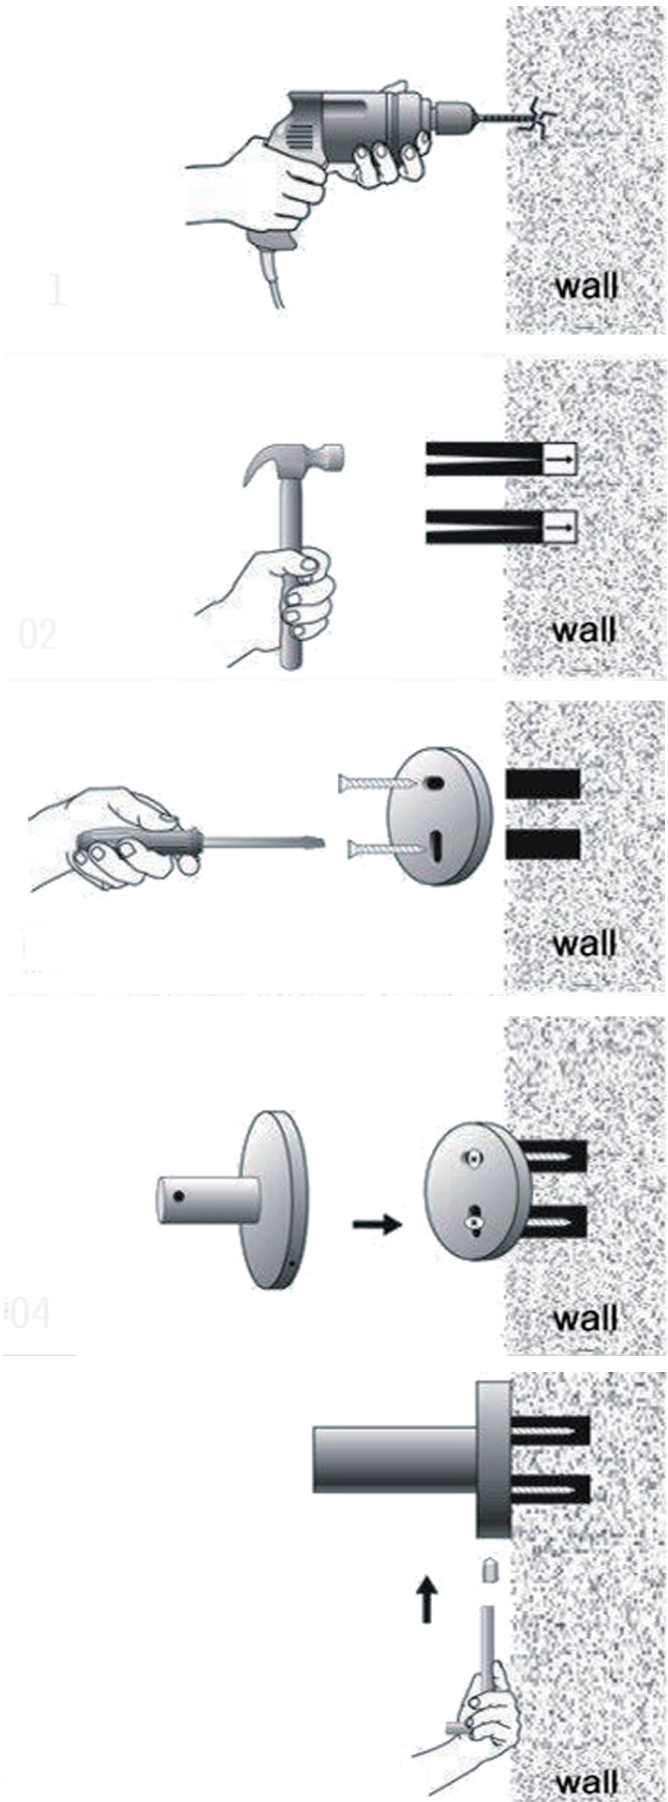

1. Put the fixing blocks (piece) over on the right place on the wall , and stay level, use marking pen through the holes of fixing block to mark out fixing spots on the wall. Then drill holes by electric hand drill with 6mm drilling bit on the spots.

2. Put the expansion plugs into the wall by hammer.

3.Put fixing block cover on the holes and fix firmly by expansion screws.

4. Put the base of bathroom accessory cover on the fixing blocks.

5. Screw grub screws into the base, make it against to the fixing block tight and firm.

Nero

