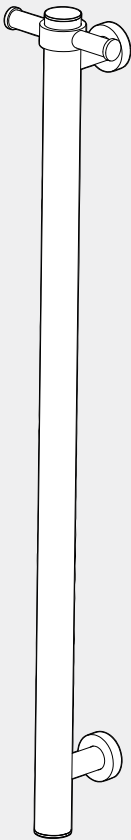


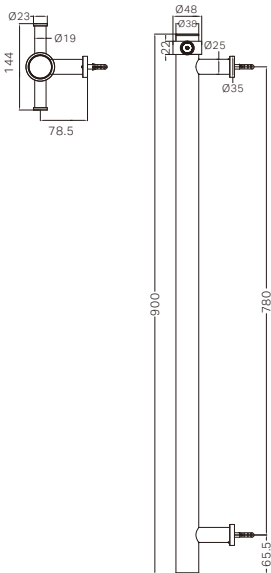
Non-Heated Vertical Towel Rail 900mm

Nero



Version: 202607

Drawing



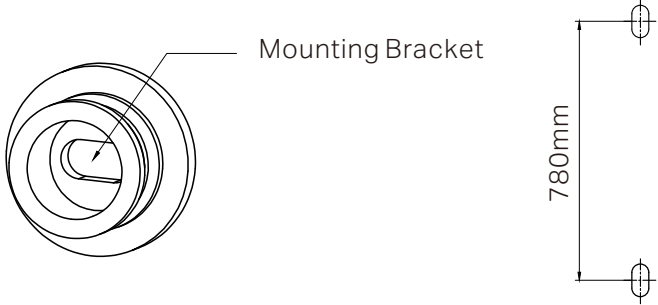
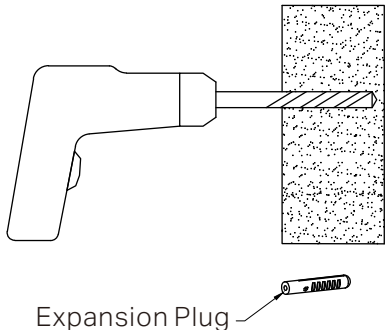
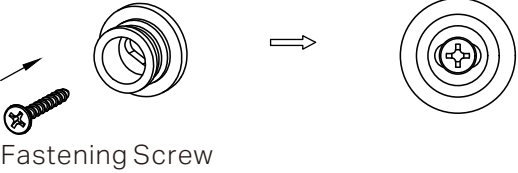
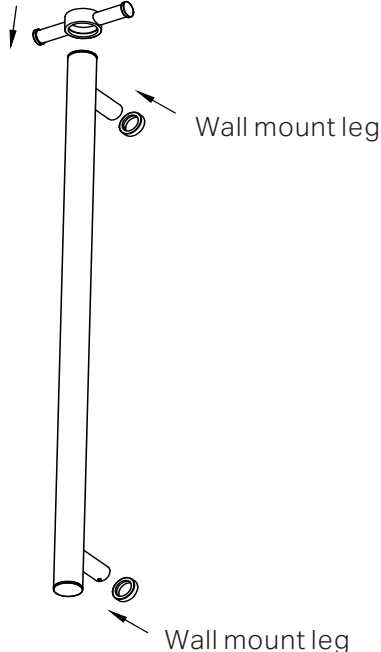
Packaging Includes


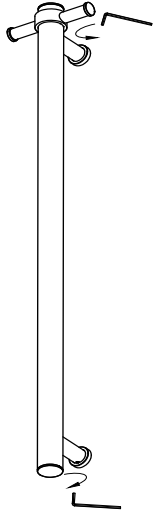

- 1x Towel Rail
- 1x Double Robe Hook
- 2x Plates
- 1x Fixing Kit

Finish & SKU

 Chrome NRV901CH	 Gun Metal NRV901GM	 Brushed Bronze NRV901BZ	 Graphite NRV901GR
 Matte Black NRV901MB	 Brushed Gold NRV901BG	 Matte White NRV901MW	 Brushed Nickel NRV901BN
 Rome Bronze NRV901RB	 Tumbled Antique Brass NRV901TA		

*Dimensions are nominal measurements only.

 Mounting Bracket 780mm	1. Use the mounting bracket to mark out the mounting points. Ensure center-to-center distance is 780mm. Please note: Choose an accessible location with enough clearance. Ensure it's free from electrical wiring or plumbing. Ensure mounting points are level.
 Expansion Plug	2. At the marked points, drill holes approximately 60mm deep to accommodate the installation of screws (or use suitable expansion plug for your wall type).
 Fastening Screw	3. Use the supplied fastening screw to fasten the mounting brackets to the wall.
 Wall mount leg Wall mount leg	4. Slide backplates to the wall mount legs. Slide the double robe hook on the top of the towel rail.

	5. Fit the towel rail to the mounting brackets.
	6. Use the supplied Allen Key to secure the grub screws into the wall brackets.
	7. Installation is complete.

Maintenance and Care:

Regular Inspection: Periodically check the towel rail for any loose fittings and tighten them as needed.

Cleaning: Clean the towel rail regularly with a soft, damp cloth. Avoid using abrasive cleaners or materials that could scratch or damage the finish.

Nero

